

## Quick Setup Guide

Model 5134G



Ensure that the following components are included with your system. If a component is missing, please call 1-800-800-1819, Option 1.

- |   |   |
|---|---|
| <b>A</b> Controller                           | <b>H</b> Short Haired Dog Collar Probes |
| <b>B</b> AC Adapter Power Cord                | <b>I</b> Heart-Shaped Collar Tester     |
| <b>C</b> Removable Wall-Mount Adhesive Strips | <b>J</b> 75 Training Flags              |
| <b>D</b> Screw                                | <b>K</b> Battery Charger                |
| <b>E</b> Wall Anchor                          | Instructional DVD                       |
| <b>F</b> Collar                               | Instruction Manual                      |
| <b>G</b> 2 RCR123 Batteries                   | Quick Setup Guide                       |

**Congratulations and thank you for choosing the Radial-Shape Wireless Dog Fence from Havahart® Wireless - the leading innovator of digital wireless fence solutions.**

The Quick Setup Guide can help you get your wireless fence up and running quickly and efficiently. It is not a replacement for the Instruction Manual. **IT IS IMPORTANT that you read and follow all safety guidelines and directions detailed in the Instruction Manual to ensure the safe and effective operation of your system.**


## IMPORTANT MESSAGE



**Proper training of your dog is the most critical element to ensure the successful operation of your wireless dog fence. Consult the training section of the Instruction Manual once you have set up your wireless dog fence.**

## AVERAGE SYSTEM SETUP TIME IS 1 HOUR

Before getting started, it is important that you understand the image below.

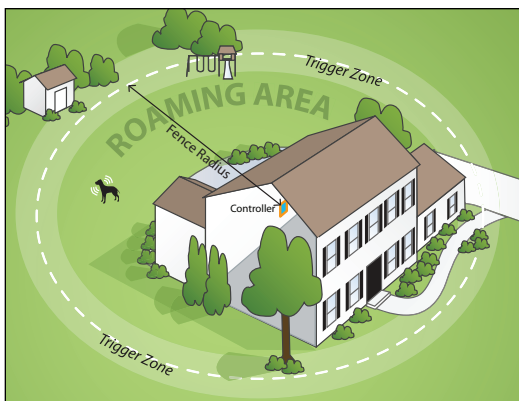

- **ROAMING AREA** - Area between the Controller and the Trigger Zone where your dog is free to play. Capable of expanding the fence radius from 40 feet up to 400 feet.
- **TRIGGER ZONE** - Zone located at the edge of the Roaming Area that forms the fence boundary. May be up to 13 feet wide.



### Need Assistance? WE CAN HELP!

CALL 1-800-800-1819, OPTION 1.

There is no need to return this product to the store for any reason.

360° CUSTOMER SUPPORT has you covered from every angle.

Woodstream Corporation  
69 North Locust Street  
Lititz, PA 17543


# 1 Setting Up the Controller

- Position the Controller **inside the home, on an outer wall**, near the center of the desired Roaming Area (see Sample Layouts).
- Place the Controller near a standard 120V AC power outlet.
- Position the Controller at least 3 feet away from large metal objects, mirrors or major appliances. These items may reduce the size and shape of the Roaming Area.
- Mount the Controller using the wall-mount adhesive strips or a screw & wall anchor approximately 6 feet off the ground or at eye level (see Instruction Manual for details).
- Plug in the Controller.
- Press Enter.

**NOTE:** Your Trigger Zone should NOT be closer than **10 feet** to ANY ROAD, SIDEWALK OR THOROUGHFARE FOR YOUR DOG'S SAFETY.


## Sample Layouts:

### Good

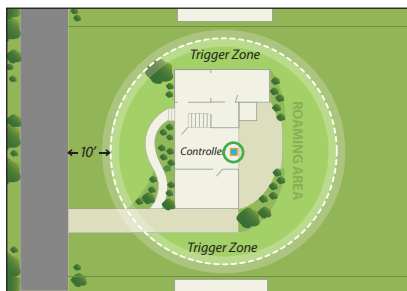

Dog has full access to house and yard within the Roaming Area. **Controller on outer wall.**

### May Cause Problems

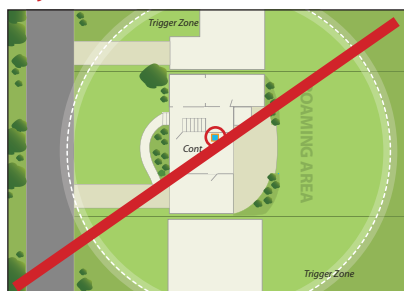

Roaming Area contains part of neighbors' property and extends onto the road. Dog will have access to neighbors' property and to the road. Consequences could be severe.

**Controller on inner wall.**

## IMPORTANT MESSAGE



**TRIGGER ZONE SHAPE:** It is normal that your Trigger Zone **MAY NOT FORM A PERFECT CIRCLE** and the actual distance from the Trigger Zone to the Controller may be less than the set radius. A reduced fence radius may be the result of Factors Affecting Signal Strength (see Instruction Manual for details). Large metal objects such as a car or refrigerator can slightly distort the roundness of your fence boundary. However, once set, the Trigger Zone location will remain consistent over time.

## 2 Setting Up the Collar

### Installing a Battery:

- Fully charge the Battery before installing (see Recharging a Battery in the Instruction Manual).
- Turn the Battery Cap counterclockwise. Insert the Battery (see Figure 1).
- Replace the Battery Cap and turn it ¼ turn clockwise to lock it in place. The Collar Light will flash green. If it does not, shake the Collar gently as the Collar is in sleep mode (see the Havahart® Collar Light Chart).



Figure 1

### Havahart® Collar Light Chart:

Collar Light	Status	Action
Off	- Collar is asleep <b>OR</b> - Battery is too Low <b>OR</b> - Battery is not in the Collar	Shake gently and watch for the Light to flash green. Make sure a fully charged Battery is in the Collar.
Fast Green Flash every second	- Collar is not added to the Controller <b>OR</b> - Controller is turned off	Make sure the Controller is turned on and add the Collar to the Controller.
Slow Green Flash every 4-5 seconds	- Normal Operation - Collar is paired to the Controller	No action required.
Red Flash	- Low Battery <b>OR</b> - Boundary Breach	Charge the Battery <b>OR</b> Return the dog to the Roaming Area.

 
**NOTE:** The Collar (Collar ID=1) has already been added to the Controller and set to Tone Only. **You may skip Activating a Collar & Adjusting the Correction Level** unless you need to add another Collar.

### Activating a Collar & Adjusting the Correction Level:


- On the Controller, select Setup Menu >> Collar Setup >> Add a Collar. "Searching for new Collars..." will appear on screen.
- Gently move or shake the Collar to keep it awake which will be indicated by the Collar Light flashing green.
- "New Collar Found! Collar ID=2" will appear on screen.
- Select Tone Only for the Correction Level.




Main Menu

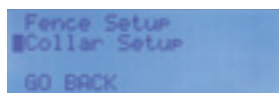

Setup Menu

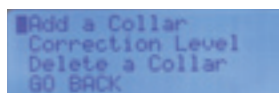

Collar Menu

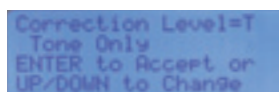 

Correction Level Menu

## Establishing the Fence Boundary/Trigger Zone Distance:

- Determine the distance, or fence radius, between the Controller and the desired boundary location (see Illustration A).
- Set the radius distance on the Controller. From the Setup Menu, select Fence Setup >> Use the up/down arrow keys to scroll to the desired fence radius distance.

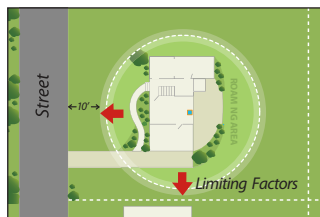


Illustration A

## Test the Trigger Zone & Place Training Flags:

- **Make sure the Collar is set to Tone Only during set up.**
- Extend your arm down by your side and hold the Collar by the Grey Battery Housing so the Collar Light can be seen (see Figure 2).



Figure 2

**NOTE:** Do not let your body get between the Collar and the Controller when setting and testing your fence boundary as it may affect the signal and cause the boundary to shift inward (see Factors Affecting Signal Strength in the Instruction Manual).

- Walk toward the boundary while gently shaking the Collar until the Collar beeps and the Collar Light flashes red.
- To confirm the boundary location, step back until the Collar stops beeping and then walk forward until the Collar beeps and the Collar Light flashes red again.
- Place a flag at the boundary (see Illustration B).
- Continue the process by walking 6 feet to the right of the previous flag until the entire containment area is surrounded (see Illustration C).
- Flags should be placed about 6 feet apart.
- Adjust the fence radius distance on the Controller if needed.

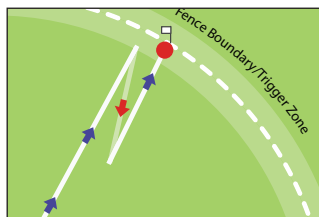


Illustration B

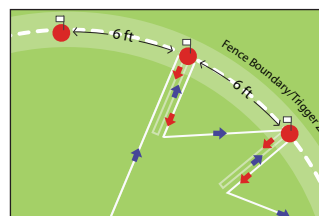


Illustration C

## Determining how many Training Flags You Need:

**Flag Calculator:** You should have 1 flag for every foot of your radius distance. If you have a 90 foot radius, you will need 90 flags to enclose your Roaming Area.

## 4 Fitting a Collar

- **Be sure the fence is turned off at the Controller** (see Turning the Trigger Zone Off/On in the Instruction Manual).
- With your dog standing comfortably, position the Collar high on your dog's neck, underneath the chin with the Probes facing upward and centered on your dog's neck. The Havahart® logo should be right side up when you look at your dog.
- Make sure the Probes maintain contact with skin.
  - Collar is factory installed with long Probes for thick or long-haired breeds.
  - Short Probes for short-haired dogs are included.
  - To change the Probes, simply unscrew the long Probes and replace them. Finger-tighten the Probes. Do not over tighten.
- Adjust the Collar to fit snugly but not tightly. You should be able to slide the tip of one finger between your dog's coat and one of the Probes on the Collar. The tip of your finger should not be able to slip between the two probes easily, but with some effort. It should be a tight squeeze (see Illustration D). Separately, you should be able to slide one finger between the strap of the Collar and the back of your dog's neck.

**NOTE:** If your dog is going to continue to grow or grows a long winter coat, leave extra room before trimming off the excess.

Once the Collar is adjusted to the correct length, remove the Collar and trim the excess using scissors (see Illustration E).



Illustration D



Illustration E

## Congratulations for completing the setup of your Radial-Shape Wireless Dog Fence.

You are now ready to start training and enjoying your fence.

### IMPORTANT MESSAGE



**Proper training of your dog is the most critical element to ensure the successful operation of your wireless dog fence. Consult the training section of the Instruction Manual once you have set up your wireless dog fence.**



## **Need Assistance? WE CAN HELP!**

CALL 1-800-800-1819, OPTION 1.

There is no need to return this product to the store for any reason. 360° CUSTOMER SUPPORT has you covered from every angle.

**Havahart® Wireless**  
**Woodstream Corporation**  
69 North Locust Street  
Lititz, PA 17543 | 1-800-800-1819

[www.HavahartWireless.com](http://www.HavahartWireless.com)