

Getting Started

IMPORTANT MESSAGE

Your Fence Boundary/ Trigger Zone should NOT be closer than 10 feet to ANY ROAD, SIDEWALK OR THOROUGHFARE FOR YOUR DOG'S SAFETY.

Planning Your Wireless Fence Boundary:

The most important step in setting up your Havahart® Radial-Shape Wireless Dog Fence is determining the proper location to mount the Controller on a wall. The system creates a circular boundary that can extend from 40 feet up to 400 feet in all directions from the Controller. Choose a wall **inside your home** nearest the center of the desired circular containment area. This is where you will install the Controller. Be sure that there is a standard 120V AC power outlet that the 6 foot AC adapter power cord can reach. Remember, proper training is essential for your dog to learn the boundary that you set.

Use the Wireless Fence Planning Grid to help with positioning the Controller.

The following are sample layouts for your reference:

Good



Dog has full access to house and yard within the Roaming Area.

Good



Dog has full access to house and yard within the Roaming Area.

May Cause Problems



Roaming Area contains part of neighbors' property and extends onto the road. Dog will have access to neighbors' property and to the road. Consequences could be severe.

May Cause Problems



Dog has limited access to house and yard within Roaming Area. Collar should be removed upon entering house, otherwise your dog will be corrected inside the home.