

NATURAL COPPER FIRE TUB

Model SH-100

Owner's Manual


IMPORTANT SAFETY INSTRUCTIONS

Please read and follow ALL instructions before assembling or using this product.

PLEASE NOTE: All copper items will age and change color naturally with use and weathering. Fire tub can be wiped with a cloth after each use to help restore finish.

NOTE: The finish will never look the same after burning.

NOTE: Add at least 1" of sand to bottom of the Fire Tub. This will distribute the heat more evenly.

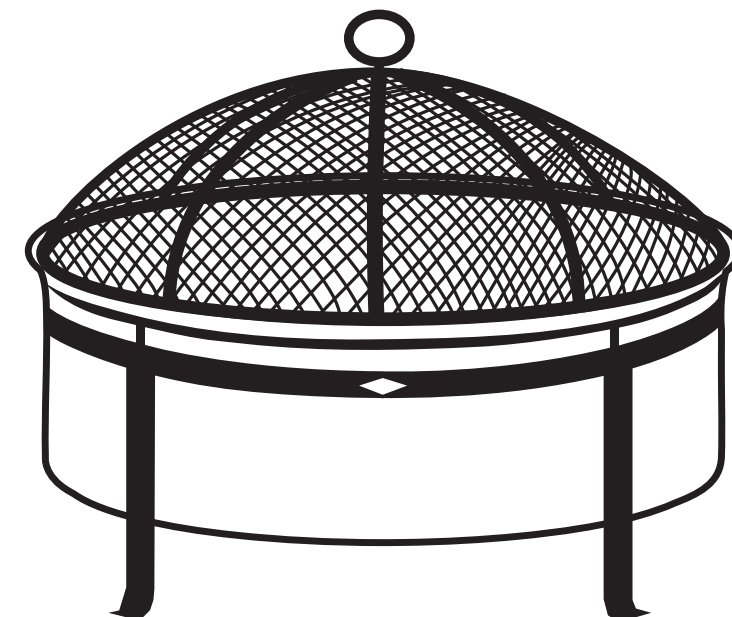

- ALWAYS use MESH COVER when fire is lit.
- NOT FOR USE BY CHILDREN.
- The FIRE TUB is HOT! DO NOT TOUCH or allow children near FIRE TUB while it is in use.
- DO NOT use on wood deck or any other flammable surface.
- DO NOT use in the vicinity of flammable objects or indoors.
- Screen Handle will be HOT when in use. Use a heat-proof barbecue mitt or poker tool to grasp handle.
- Approved items for burning: wood, self-starting fire logs, paper & charcoal.
- Bowl will not warp from heat, but you may place sand in the bottom, if desired.
- Copper bowl is not coated with any chemical finish that will burn off.
- DO NOT put on VINYL COVER until FIRE TUB is completely cooled & embers extinguished.

WARNING! CARBON MONOXIDE HAZARD

Burning charcoal inside can kill you. It gives off carbon monoxide, which has no odor. NEVER burn wood or charcoal inside homes, vehicles or tents.

092804

Copyright ©2004, CobraCo Mfg., Inc. • Lake Zurich, IL 60047

FOR OUTDOOR USE ONLY! FOR OUTDOOR USE ONLY!

SH-100 FIRE TUB WITH SCREEN


PARTS ENCLOSED*:

- A. Metal Handle Ring (1)
- B. Metal Nut (1) for securing handle
- C. Mesh Fire Screen Cover (1)
- D. Copper Fire Tub (1)
- E. Assembled Stand (1)
- F. Vinyl Cover (1)

* Please check enclosed parts shipped with the Fire Tub. If any parts are missing, do not return the item to your retailer. Please contact us first for replacement parts. Please use E-mail (for quickest response) customerservice@cobraco.com or call: CobraCo® Manufacturing, Inc. at (847) 726-5800 x. 37 (Customer Service)

ASSEMBLY INSTRUCTIONS:

1. Assemble HANDLE (A) to SCREEN COVER (C) with the supplied NUT (B).
2. Hold copper FIRE TUB (D) above the assembled FIRE TUB STAND (E) and gently lower it into place.
3. Place assembled SCREEN COVER (C) on top of the FIRE TUB (D) in the FIRE TUB STAND (E), see Diagram 2.
4. After using the FIRE TUB, make sure the unit is thoroughly cooled and all embers are extinguished. Then cover assembled unit with VINYL COVER (F).

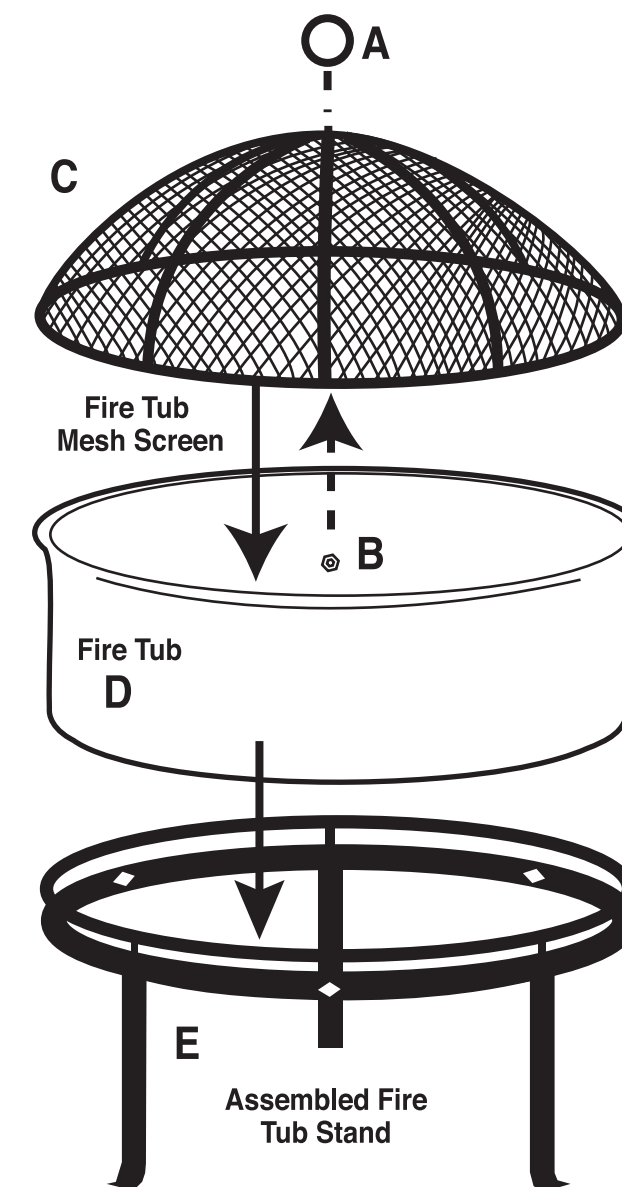

NOTE: Your FIRE TUB is made of copper and will change color after each use. If desired, you can help restore the finish by wiping soot and ashes up with a cloth after each use or by using copper polishing cream & following the manufacturer's instructions.

NOTE: Finish will never look the same after burning.
NOTE: Add at least 1" of sand to the bottom of the Fire Tub. This will distribute the heat more evenly.



DO NOT allow small children near flame. Hot embers can fly out of the FIRE TUB in windy conditions. Adequate fire extinguishing material should be readily available.



WARNING! DO NOT use this unit on a wood deck or on combustible surfaces such as dry grass, leaves, mulch, etc. DO NOT use this unit near heat sensitive or combustible structures such as vinyl or wood siding.



CAUTION! Read and follow all safety statements, Warnings, Assembly Instructions and Use & Care directions before attempting to assemble the unit.



CAUTION! Some parts may contain sharp edges. Wear protective gloves as necessary.

Copyright ©2004, CobraCo® Mfg., Inc.
Lake Zurich, IL 60047

Made in China
and/or India